

# USER MANUAL

# UPS ZINTO

## Models 800 – 3,000

Version: 02/2025



# Content

<b>1</b>	<b>Introduction</b>	<b>3</b>
<b>2</b>	<b>Safety warnings</b>	<b>5</b>
<b>3</b>	<b>Installation</b>	<b>6</b>
3.1	Checking the delivery	6
3.2	Unpacking the UPS system	6
3.3	Checking the accessories	7
3.4	Installation as tower, activating battery	7
3.5	Installation in a rack, activating the batteries	8
3.6	Getting started	10
<b>4</b>	<b>Operation</b>	<b>11</b>
4.1	Control panel	11
4.2	Display and menu	12
4.3	Settings	14
4.4	Operating statuses	15
<b>5</b>	<b>Communication and interfaces</b>	<b>17</b>
5.1	RS-232 and USB interface	17
5.2	Slot for interface cards	17
5.3	Emergency Power Off (EPO) function	18
5.4	Surge voltage protection for data and telephone lines (DSL / telephone / fax / network)	19
5.5	DataWatch software	19
<b>6</b>	<b>Maintenance</b>	<b>20</b>
6.1	Care and maintenance	20
6.2	Storage	20
6.3	When to change the batteries	21
6.4	Replacing the batteries	21
6.5	Testing the new batteries	23
6.6	Disposing of the old batteries or UPS system	24
<b>7</b>	<b>Troubleshooting</b>	<b>24</b>
7.1	Error codes	24
7.2	Warnings	25
7.3	Troubleshooting	25
7.4	Muting the alarm	26
<b>8</b>	<b>Support</b>	<b>27</b>
<b>9</b>	<b>Technical data</b>	<b>28</b>
9.1	Specification	28
9.2	Rear view	30
9.3	CE confirmation	31
<b>10</b>	<b>Warranty</b>	<b>34</b>
	<b>Imprint</b>	<b>35</b>

# USER MANUAL UPS ZINTO

Models 800 – 3,000

## 1 Introduction

ONLINE USV-Systeme AG (ONLINE) is one of the leading manufacturers of uninterruptible power supplies (UPS). Since 1988, the German company has focussed on the development, production, sale and support of UPS systems. Based on unit numbers sold, ONLINE products are the German number one in the UPS market and internationally recognised because of their top quality and excellent support.

The power supply often fails when you least expect it. There can also be significant fluctuation in the quality of the power supply. Network problems can lead to the corruption of critical data, data which is not backed up can be lost and hardware damaged. This means expensive repairs and downtime.

Models in the ZINTO range from ONLINE are the best way of preparing for these kinds of scenarios. ZINTO protects sensitive applications from data loss and operating downtime, whether they are price-sensitive entry servers or high-end PCs, telephone systems, network peripherals or NAS boxes.

Two of the many highlights of the ZINTO range are its performance of up to 3000 VA with silent operation and its design as a versatile rack tower system with just 2 height units.

The 'Buck & Boost' function offers additional security by electronically handling short power outages without using a battery. This increases the life expectancy of the battery and minimises ongoing costs.

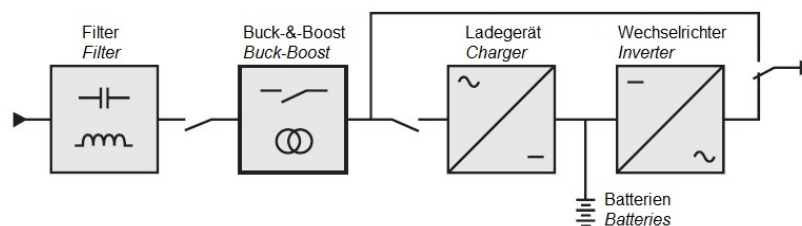


Figure 1: Circuit diagram of principle

**The ZINTO also offers the following benefits:**

- Rack-Tower-versatile model, only 2U
- Silent in normal operation
- Buck & Boost function for voltage regulation without battery
- Perfect sinewave output voltage
- Efficiency >97 %
- High active power due to Power factor 0.9
- Hot-swap battery for easy replacement while the system is running and without disconnect the load
- Battery deep discharge protection
- Cold-start function, starting the UPS system without main power
- Switchable output sockets to increase the backup time for critical loads
- Surge protection for data and telephone wires
- RS-232 and USB interface
- Slot for optional SNMP adapter or AS400-/dry-contact interfacecard
- Emergency-off function (EPO = Emergency Power Off)
- 3 years warranty incl. battery and free exchange in advance



Figure 2: ZINTO 800 – 3000 as rack



Figure 3: ZINTO 800 – 3000  
as tower

## 2 Safety warnings

This manual contains important instructions that you must follow during the installation and maintenance of the UPS system and the batteries. Please read all the instructions in the manual before working with the device. Keep the manual in a safe place.

### CAUTION

- The UPS system carries life-threatening voltages. All repair and maintenance work must be carried out by customer service personnel.
- The UPS system has its own energy source (batteries). The output of the UPS system can be live even when the UPS system is not connected to a source of alternating current.
- In order to reduce the risk of fire or electric shock, the UPS system may only be installed in buildings with controlled temperature and air humidity in which there are no conductive contaminants. The ambient temperature must not exceed 40 °C. The UPS system must not be operated near water or in extremely high air humidity (>90 %).
- Before transporting the UPS system, make sure that it is disconnected from the power supply and switched off.
- Batteries can pose a risk of electric shock or catch fire as a result of high short circuit current. Please take the necessary precautionary measures. Maintenance must be carried out by qualified personnel who are trained in handling batteries and have good knowledge of the necessary precautionary measures, see Chapter 6: > [Maintenance](#). Keep unauthorised personnel away from batteries
- Batteries must be disposed of properly. Local regulations must be taken into consideration.
- Batteries must not be burnt. There is risk of explosion.

## 3 Installation

### 3.1 Checking the delivery

Keep the transport box and the packaging material for the carrier or sales point. If parts of the system have been damaged in transit, submit a transport damage complaint to your supplier within 24 hours. If you only discover damage after accepting the device, please submit a complaint for concealed damage.

### 3.2 Unpacking the UPS system

#### CAUTION

- Unpacking the UPS system at a low ambient temperature can lead to the formation of condensation inside and outside the casing. Only install the UPS system if the inside and outside are completely dry (risk of electric shock).
- The UPS system is very heavy (see Chapter 9 > [Technical Data](#)), be careful when unpacking and transporting it.

#### PLEASE NOTE

Move and open the packaged UPS system carefully. Leave the components in their packaging until they are installed.

#### To unpack the UPS system and accessories:

1. Open the external box and take the accessories packed with the UPS system out.
2. Carefully lift the UPS system out of the external box.
3. Place the UPS system in a protected, adequately ventilated position which is free of humidity, flammable gasses and corrosion.

### 3.3 Checking the accessories

Table 1: Package contents

Description	ZINTO 800	ZINTO 1000	ZINTO 1500	ZINTO 2000	ZINTO 3000
19" mounting bracket (left and right)	2	2	2	2	2
Feet for tower mounting (sets)	2	2	2	2	2
USB interface cable	1	1	1	1	1
10A IEC extension cable	2	3	3	4	4
16A mains cable				1	1
Quick start guide	1	1	1	1	1
DataWatch software*	1	1	1	1	1
Manual*	1	1	1	1	1

\* Download from > [www.online-ups.com/download-center](http://www.online-ups.com/download-center)

### 3.4 Installation as tower, activating battery

The UPS system is delivered fully assembled.

**CAUTION**

The casing is very heavy (see Chapter 9 > [Technical Data](#)).

1. For safety reasons, the UPS system is delivered without the batteries connected. In order to activate the battery, remove the front panel. To do this, pull them to the front side of the UPS system. Now connect the two red battery connectors to one another. Then fit the front panel again by reversing the sequence.

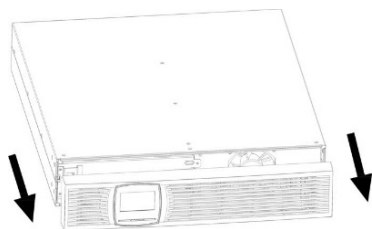


Figure 4: Removing the frontpanel

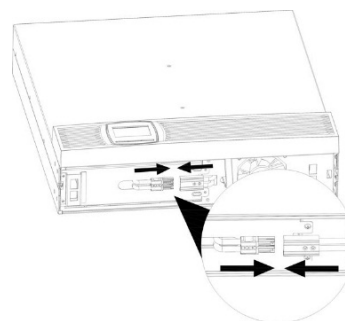


Figure 5: Connecting the battery

2. Connect two foot components to one foot (see Figure 6) and push the UPS system into the two feet from above (see Figure 7). Make sure the distance between the two feet is as great as possible to ensure stability.

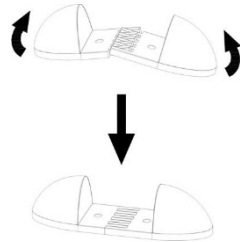


Figure 6: Foot mounting

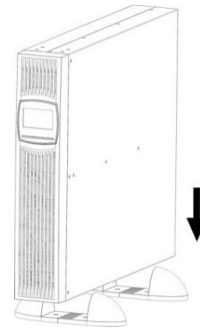


Figure 7: Installation as a tower

3. Continue the starting process (see Chapter 3.6 > [Getting started](#))

### 3.5 Installation in a rack, activating the batteries

The UPS system is delivered fully assembled.

**CAUTION**

The casing is very heavy (see Chapter 9 > [Technical Data](#)).

Optional slide rails (article no. Rack Kit) are available for the rack model. The slide rails fit 48 cm (19 inch) racks with a depth of 48 to 78 cm.

1. Fit the rack kit (separate assembly instructions provided with the rack kit).
2. Adjust the display direction for horizontal rack installation. To do this, pull the frontpanel to the front side of the UPS system. Push the plastic clips apart and pull the display out of the holder. Push it 90 degrees anticlockwise and insert it back into the front panel.

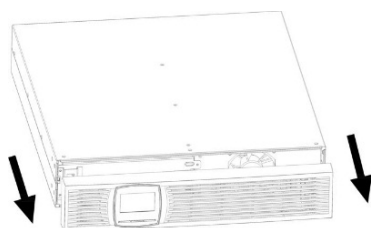


Figure 8: Removing the frontpanel

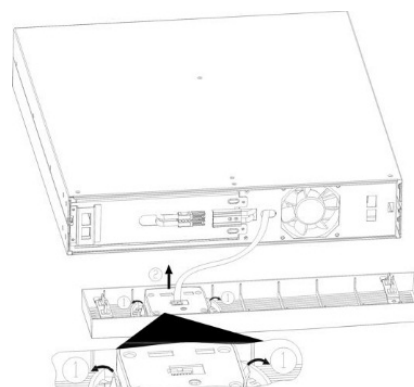


Figure 9: Turning the display



3. For safety reasons, the UPS system is delivered without the batteries connected. To activate the battery connect the two red battery connectors to one another.

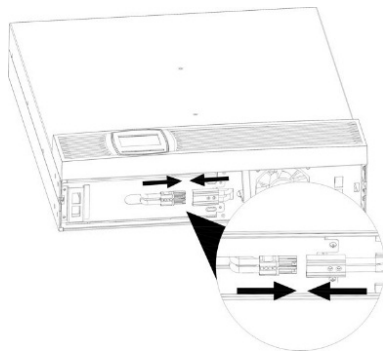


Figure 10: Connect the battery

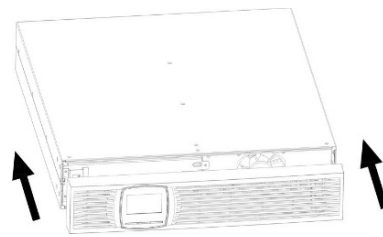


Figure 11: Mounting the frontpanel

4. Finally, fit the front panel by reversing the sequence.
5. Align the mounting bracket (L = left and R = right) with the screw holes on either side of the UPS system and affix it using the M4 x 8 countersunk screws provided.
6. Push the UPS system into the rack.
7. Secure the mounting bracket of the UPS system in the rack (see Figure 12 and Figure 13).

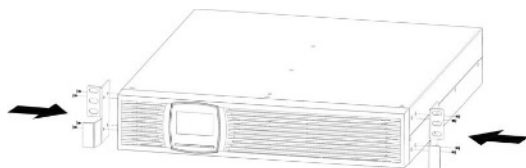


Figure 12: Mounting the brackets

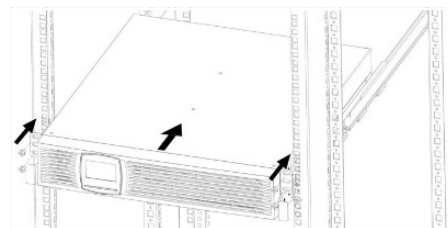


Figure 13: Fitting in a rack

8. Continue the getting started process (see > [Chapter 3.6](#))

### 3.6 Getting started

#### PLEASE NOTE


Make sure that the overall rated performance of the load connected does not exceed the capacity of the UPS system. The power consumption of inductive loads or laser printers can be very high, please take this into consideration when specifying your UPS system.

1. Connect the load with the UPS system without switching them on. Make sure that the UPS system has two groups of output sockets. The programmable output sockets can be switched independently of the remaining sockets. The programmable output sockets are primarily designed for less critical load which cannot be brought down using software. Critical load should not be connected to the programmable output sockets.
2. Connect the power supply cable (supplied with the ZINTO 2000 and 3000) for the UPS system into a socket. The display on the UPS system shows "Sb".
3. Hold the "ON / MUTE" button on the UPS system down until you hear a short beep.
4. The UPS system carries out a self-test, after which "OK" appears on the display. The UPS system is now operating in normal mode and supplying the load with reliable power.
5. If an additional emergency power off switch has been installed, the emergency stop function needs to be tested.
6. Switch the load on one by one.

#### PLEASE NOTE

The internal batteries charge up to 90 % of their full capacity in less than six hours. ONLINE recommends charging the batteries for 48 hours after installation or extended periods of non-use. The batteries start to charge as soon as the UPS system is connected to the supply network and supplied with power, irrespective of the operating mode.

#### Starting in battery mode

1. Hold the "ON / MUTE" button on the UPS system down until you hear a beep.
2. The UPS system is starting, the display then shows the battery statuses (see Chapter 4.4 > [Operating statuses](#)) and supplies the load connected with reliable power.
3. If the display  lights up, resolve all warning messages (see Chapter 7.3. > [Troubleshooting](#)) and restart the UPS system.

## Switching off

1. Hold the “OFF” button on the UPS system down for 2 seconds.  
When the continuous beep ends, the UPS system switches to standby mode.

### PLEASE NOTE

If the “OFF” button is released after less than 2 seconds, the unit is not switched off.

2. Disconnect the mains connection cable of the UPS system from the socket. The display on the UPS system goes out after a short time and the UPS system switches off completely.

## 4 Operation

### 4.1 Control panel

The UPS system has a control panel with three buttons and a graphical display (see Figure 14).



Figure 14: Control panel and display

Table 2: Descriptions of display

Button	Function	
ON /  /	Switch on	In standby mode: Press button for more than 2 seconds
	Alarm signal OFF	In battery mode: Press button for more than 2 seconds, not valid if there are warning or error messages
	Back to top	In configuration mode: In previous menu
OFF /	Self-test	In normal mode: Press button for more than 2 seconds
	Switch off	In normal mode: Press button for more than 2 seconds
SELECT /	Selection	In configuration mode: Press the button to apply the selection
	Switch over	In normal mode: Switching the display from input voltage and frequency, battery voltage and capacity, UPS internal temperature, output voltage, frequency and current, load
	Configuration mode	In standby mode: Press button for longer than 2 seconds to start configuration mode
	Down	In configuration mode: Back to menu











Button	Function
ON + SELECT	Exit In configuration mode: Press both buttons to revert from the sub-menu to the main menu or, if you are in the main menu, to exit configuration mode immediately









**PLEASE NOTE**

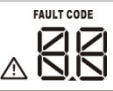During the function or battery test, the batteries must be completely charged and the UPS system must be in normal mode.

## 4.2 Display and menu

Table 3: Display

Symbol	Description	Function
	Input, battery, temperature, output, load	Pressing the SELECT button in normal mode displays the following measurements: Input voltage and frequency, battery voltage and capacity, UPS internal temperature, output voltage, current and frequency, load in %.
	Autonomy time	Display of remaining autonomy time
	Load display	Displays the current load. Each segment represents 25 %. If all the segments are lit up, the UPS system is working at 100 % load.
	Overload	Indicates that the UPS system is overloaded
	Programmable output sockets	Indicates actively programmed output sockets
	Battery display	Indicates the current battery capacity. Each segment represents 25 %. If all the segments are lit up, the battery is 100 % charged.
	Battery empty	Battery symbol underneath battery display: Flashing indicates the battery capacity is almost empty
	Configuration	Display of configuration menu options. For further information, see Chapter 4.3 > <a href="#">Settings</a>
	Error	Display of error or alarm code For complete table, see Chapter 7.1 > <a href="#">Error codes</a>
	Acoustic alarm	Displays a deactivated acoustic alarm, silent

Symbol	Description	Function
	Input voltage	The UPS input is connected to the mains voltage
	Rectifier	Rectifier active, battery charging
	Inverter	Active inverter, the load on the output sockets are UPS-protected
	Output sockets	Active UPS output
	Battery	Battery symbol in DC link: UPS system in battery mode
	Battery charging	Battery symbol in DC link: Battery in charging mode
	Boost mode	The UPS system evens out low voltage in the mains voltage without the battery
	Buck mode	The UPS system evens out high voltage in the mains voltage without the battery

**Table 4: Acoustic alarm**

Alarm	Description
Every 5 seconds	UPS system in battery mode
Every 2 seconds	Battery voltage low
Every second	Overload
Continuous tone	Error

**Table 5: Overview of operating status**





Abbreviation	Display	Description
AC	AC	Active Closed
AO	AO	Active Open
BL	bL	Battery Low
BR	bR	Battery Replace
CH	CH	Charger
DIS	dI S	Disable
EE	EE	EEPROM Error
ESC	ESC	Escape
ENA	ENA	Enable
EP	EP	EPO / Emergency Power Off



Abbreviation	Display	Description
ON	ON	On
OK	OK	OK
TP	TP	Temperature

### 4.3 Settings

1. Open configuration menu: Switch to standby mode and press ▼ button for 3 seconds.
2. Selection of menu options: Press ▼ or ▲ button until you reach the menu option you want (see Table 6).
3. Select menu option: Press ← button.
4. Change menu setting: Press ▼ or ▲ button until you reach the setting you want (see Table 6).
5. Confirm setting: Press ← button.
6. Exiting configuration menu: go to menu "00" or press ▼ and ▲ buttons at the same time.

**Table 6: Configuration menu**

Setting	Available options	Standard
	Select output voltage: [208] = 208 V [220] = 220 V [230] = 230 V [240] = 240 V	230V
	Programmable output sockets: [ENA] = Enabled [DIS] = Disabled	DIS
	Shutdown time for programmable output sockets: [0 - 999] = Shutdown of programmable output sockets in battery mode after time defined here. Only available if "Programmable output sockets = active" and UPS system restarted after setting the time.	999
	Battery deep discharge protection: Shutdown of all output sockets in battery mode after time defined here. [0 - 999] = Shutdown after 0 to 999 minutes. [DIS] = Shutdown time dependent on battery capacity. <b>ATTENTION:</b> If the setting is [0], shutdown is after 10 seconds.	DIS

Setting	Available options	Standard
	Emergency power off function: [AO] = active open, emergency power off is active with emergency power off contact open [AC] = active close, emergency power off is active with emergency power off contact closed	AO
	Exit: Exiting configuration menu	

#### 4.4 Operating statuses

The status of the UPS system is displayed on the control panel.

##### Normal operating mode

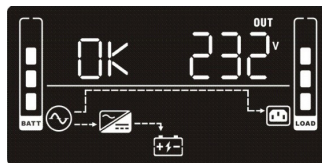


Figure 15: Normal mode display

In normal mode, "OK" is shown on the display and the UPS system is fed by the supply network. The UPS system monitors the batteries and charges them as required. The load connected is supplied with power.


##### Battery mode

In battery mode, the following display appears:



Figure 16: Battery mode display

At the same time, an acoustic alarm every 5 seconds indicates that the load connected is being supplied with battery power.

If the battery charge is low in battery mode, the display shows "bL",  starts flashing and the alarm sounds every 2 seconds. The remaining autonomy time is low. Close all applications, as the UPS is about to shut down automatically.

If the battery is exhausted, the UPS system shuts itself down. All displays and the alarm are switched off.

If the supply network is restored after the UPS system has shut down, the UPS is automatically restarted. The batteries are charged up and the load connected are supplied with power.

### Standby mode

If the UPS system is switched off and the power supply cable is connected, the UPS system works in standby mode. The following display appears:



Figure 17: Display in standby mode

No power is available for the load connected. The battery is charged if necessary.

### Buck & Boost mode

If the input voltage is greater than the maximum tolerance, the UPS system switches into buck mode. The output voltage is reduced to a non-critical level electronically, without using the batteries.

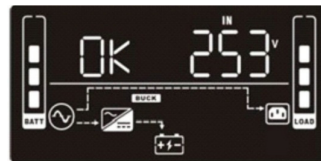


Figure 18: Display Buck & Boost mode display

Boost mode evens out insufficient input voltage electronically, without using the battery. The output voltage is raised to a non-critical level for the load connected.



## 5 Communication and interfaces

### 5.1 RS-232 and USB interface

In order to establish communication between the UPS system and a computer, connect the computer using a suitable data cable (USB cable provided) to the RS-232 or USB interface on the UPS system (see Chapter 9.2 > [Rear view](#)).

**PLEASE NOTE**

The RS-232 and USB communication interfaces cannot be used at the same time.

The UPS system can then exchange data via the > [DataWatch software](#) (see Chapter 5.5). The assignment of the cable connection pins for the RS-232 communications interface is shown in Figure 19, while the functions of the connection pins can be found in Table 7.

**Table 7: Pin assignment for RS-232 interface**

PIN	Function
1	Not used
2	Send data (TxD)
3	Receive data (RxD)
4	Not used
5	Mass
6, 7, 8, 9	Not used

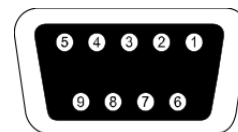


Figure 19: RS-232 interface (DB9-connector)

### 5.2 Slot for interface cards

The ZINTO features a slot (see Chapter 9.2 > [Rear view](#)) for the following interface cards:

**Table 8: Interface cards**

Product no.	Description
DW7SNMP30	<b>SNMP adapter Basic:</b> The SNMP adapter communicates via TCIP/IP with the load attached to the network.
DW5SNMP30	<b>SNMP adapter Professional:</b> Works like Basic, but with additional interface for temperature sensor and building management.
DWAS400DC	<b>AS400 relay card:</b> Combined slot card for optional communication with IBM AS400 servers or individual use of relay contacts. The following messages/contact outputs are available: UPS normal mode, standby mode, battery mode, battery voltage low, bypass mode (XANTO only), aggregated error, input for UPS shutdown.

**PLEASE NOTE**

The interface cards installed in the slot can be used in parallel with the RS-232 or USB communication.

### 5.3 Emergency Power Off (EPO) function

The Emergency Power Off (EPO) function is used to remotely shut down the UPS system and connected load immediately. This means removing the bridge on the emergency power off connector (back of UPS system, see Chapter 9.2 > [Rear view](#)) and connecting an external emergency power off switch.

Cross section of connecting cable = 0.5 – 2.5 mm<sup>2</sup> (AWG 13 – 20)

Recommended cross-section of connecting cable = 1.5 mm<sup>2</sup> (AWG 15)

#### CAUTION

- The emergency power off switch must not be connected to circuits which are connected to the supply network. Reinforced insulation from the network is required. The emergency power off switch must be designed for at least 60 V DC / 30 V AC and 20 mA.
- Depending on the programming via the UPS menu (see > [Chapter 4.3](#)), either an opener or a closer can be used. The emergency power off function must be active for at least 250 ms for proper operation.
- If the emergency power off function is activated, the input voltage of the UPS system also needs to be interrupted.
- The emergency power off function is only used to shut down the UPS voltage on an electronic basis.

#### PLEASE NOTE

- Leave the plug of the UPS system connected if you do not need the emergency power off function
- Always test the emergency power off function before connecting a critical load. This avoids the load being switched off accidentally

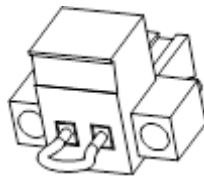


Figure 20: Emergency power off connector

See Chapter 9.2 > [Rear view](#) for the position of the emergency power off connector.

## 5.4 Surge voltage protection for data and telephone lines (DSL / telephone / fax / network)

The surge protection filters surge voltage from the data and telephone cables. This involves connecting the incoming cable to the IN connection on the reverse of the UPS system. Connect the OUT connection to the end device. The data connection protection cable protects networks with a transfer rate of 10 to 1000 Mbit/s.

## 5.5 DataWatch software

The ZINTO range is supplied as standard with DataWatch, a comprehensive software solution for shutting down and managing the PC or server system and for monitoring the ZINTO and the power supply network. To ensure you are always working with the latest version of DataWatch, please download it from the download area of [www.online-ups.com/download-center](http://www.online-ups.com/download-center).

DataWatch works in the background and is in constant communication with the ZINTO via the RS-232, USB or network protocol. The most famous of all functions: Automatic data backup including the shutdown of running applications and the proper shutdown of the whole system by means of a freely configurable shutdown routine. At the same time, DataWatch has a comprehensive messaging system, time-controlled test routines and event logging.

DataWatch supports all current operating systems.

As a client/server application, DataWatch works in networks and on local workstations. Based on optional RCCMD agent (Remote Console Command), multiple servers connected to a UPS system can be addressed and controlled across the network without additional hardware.

**Table 9: Overview functions for LCD and DataWatch**

Overview of functions	UPS / LCD	DataWatch software
Display of input voltage, frequency and current, battery voltage, current and capacity, UPS internal temperature, output voltage, frequency and current, load	X	X
Change operation mode of the UPS system (normal mode, standby mode)	X	X
Changing the output voltage	X	X
Configure and enable / disable the programmable outlet sockets	X	X
Configure and enable / disable the battery deep discharge protection	X	X
Configure and enable/disable the emergency power off function (EPO)	X	X
Manual restart of the UPS system	X	X
Signalling battery failure	X	X
Advanced display of the total battery runtime		X
Display of the serial number		X
Local server shutdown via RS-232 / USB-interface		X
Multi server shutdown via TCP/IP		X
SNMP-proxy-agent		X
Send E-Mail, SMS, broadcastmessages		X
Manual UPS 10s-test	X	X
Manual UPS fulltest		X
Auto UPS selftest		X

Overview of functions	UPS / LCD	DataWatch software
Enable/disable alarm for battery operation	X	X
Enable/disable all alarms		X
Reset UPS system to factory settings		X
Display alarm-, warning- and error-messages	X	X
Chronological record, display and export (csv) of warning-, alarm- and error-messages		X
Record, display and export (csv) of voltage, current, frequency and temperature (datalog chart)		X
Customized event configuration		X

## 6 Maintenance

### 6.1 Care and maintenance

To ensure a long service life for the system, the area around the UPS system should be kept clean and free of dust. If the area around the system is very dusty, clean the external surfaces of the system with a vacuum cleaner.

To ensure a long service life for the batteries, the ambient temperature should not exceed 25 °C.

#### PLEASE NOTE

- Before transporting the UPS system, make sure that it is disconnected from the supply network and switched off.
- The service life of a battery varies as a function of how often it is used, intensity of use and ambient temperature. Batteries which are used beyond their expected service life often have reduced autonomy times. Replace the batteries in good time to ensure the system always runs at optimum performance.

### 6.2 Storage

If you intend to store the UPS system for an extended period, charge the battery every three months by connecting the UPS system to the supply network for five hours. The system should be stored in a cool, dry place.

### 6.3 When to change the batteries

If “bR” is shown on the display and an alarm signal sounds every 2 seconds, the batteries need to be replaced. Contact your reseller or ONLINE (> [www.usvshop24.de](http://www.usvshop24.de)) to order new batteries.

### 6.4 Replacing the batteries

#### PLEASE NOTE

Do not replace the batteries while the UPS system is in battery mode.

The hot-swap functionality means the batteries can be replaced without first shutting down the UPS system and disconnecting the load.

If you would prefer to disconnect the UPS system before changing the batteries, read Chapter 3.6 > [Getting started](#).

#### CAUTION

- Maintenance work must be carried out by a qualified technician who is familiar with batteries and the necessary safety measures. Do not allow unauthorised personnel to handle the batteries.
- Batteries pose the risk of an electric shock or injury due to high short circuit current. Take the following safety measures:
  - Remove watches, jewellery and other metal items
  - Only use tools with insulated handles
  - Do not place tools or metal components on the batteries
- The batteries must only be replaced with the same number of batteries of the same type.
- Batteries must be properly disposed of. When disposing of batteries, comply with the statutory regulations applicable in your location.
- Batteries must not be burnt. There is risk of explosion.
- Do not open or damage the battery or batteries. Battery acid can damage the eyes and skin and cause poisoning.
- DANGER OF ELECTRIC SHOCK. Never make changes to the battery cabling or connections. Attempting to change the battery cabling yourself could lead to serious injury.
- The batteries of the UPS system are very heavy. Be careful when handling heavy batteries.

The batteries are behind the front panel of the UPS system. The internal batteries are packed together for ease of handling.

1. Remove the front panel (see Figure 21). To do this, pull the frontpanel to the front side of the UPS system.

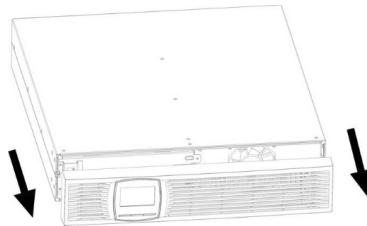


Figure 21: Removing the front panel

**PLEASE NOTE**

There is a flat ribbon cable connecting the control panel to the UPS system.  
Do not pull on the cable or disconnect it.

2. Disconnect the battery connector (see Figure 22)

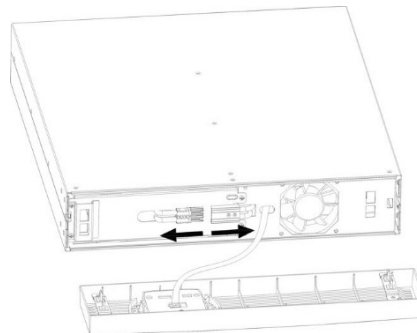


Figure 22: Disconnecting the battery connector

3. Remove the battery cover (see Figure 23).

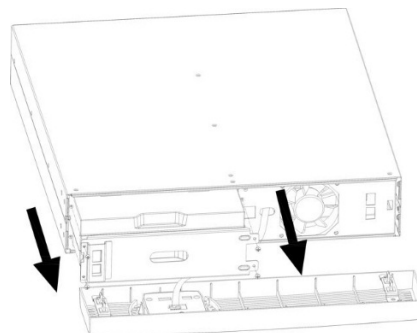


Figure 23: Removing the battery cover

4. Carefully remove the battery insert using the handle.
5. Replace the batteries in the battery insert.

**PLEASE NOTE**

- Check that the replacement batteries have the same specifications as the old batteries.
- Read Chapter 6.6 > [Disposing of the old batteries or UPS system](#) for information on proper disposal.



6. Reverse the removal procedure to reinsert the battery insert.

**CAUTION**

A small arc can occur when the batteries are connected to the UPS system. This is normal and represents no risk to personnel. Insert the battery cable quickly and firmly into the battery plug connection in the UPS system.

7. Continue with > [Chapter 6.5](#).

## 6.5 Testing the new batteries

1. To charge the batteries, connect the UPS to the supply network for 48 hours.
2. In normal mode, hold the „ON /  /  “ button for at least 2 seconds to start the self-test.
3. If the batteries are faulty, a warning is displayed automatically (see Table 11: Warnings).  
Press “OK” to acknowledge a successful battery test and to switch the UPS system back into normal mode.

**PLEASE NOTE**

The UPS system only starts a self-test when the batteries are fully charged and the UPS system is in normal mode with no active warning messages.

## 6.6 Disposing of the old batteries or UPS system

Find out from a local recycling centre how the old batteries or the UPS system should properly be disposed of. Old batteries can also be returned to ONLINE for disposal free of charge. Please contact > [Support](#) (see Chapter 9)

### CAUTION

- Batteries must not be burnt. There is risk of explosion.
- Batteries must be disposed of properly. Find out about the local disposal regulations.
- Do not open or damage the battery or batteries. Battery acid can damage the eyes and skin and cause poisoning.

## 7 Troubleshooting

The ZINTO is designed for autonomous operation and automatically reports and problems in the display.

### 7.1 Error codes

Table 10: Error codes











Error code	Event
01	Error starting the DC link
02	DC link voltage too high
03	DC link voltage too low
11	Error starting inverter
12	Inverter voltage too high
13	Inverter voltage too low
14	Short circuit in inverter output
27	Battery voltage too high
28	Battery voltage too low
41	Temperature too high
43	Overload
45	Charger error

If the UPS system indicates one of the error codes listed above, please contact > [ONLINE support](#) (see Chapter 8).








## 7.2 Warnmeldungen





**Table 11: Warnings**

Ereignis	Symbol	Code	Alarm
Battery capacity low		BL	Warning sound every 2 seconds
Overload		OL	Warning sound every second
Battery not connected		NC	Warning sound every 2 seconds
Battery overload		OC	Warning sound every 2 seconds
Emergency power off active		EP	Warning sound every 2 seconds
Temperature too high		TP	Warning sound every 2 seconds
Charger error		CH	Warning sound every 2 seconds
Battery error		BF	Warning sound every 2 seconds
Replace battery		BR	Warning sound every 2 seconds
EEPROM Error		EE	Warning sound every 2 seconds




## 7.3 Troubleshooting

**Table 12: Troubleshooting**

Operating status	Possible cause	Measure
The UPS system cannot be switched on, although there are no alarms and the input voltage is normal.	The input cable is not correctly connected to the input socket. The input cable has been accidentally connected to the UPS output sockets.	Check that both connectors are properly inserted in the sockets. Connect the input cable to the UPS input.
The  and  symbols flash and an alarm is sounded every 2 seconds.	Emergency power off is active.	Check that the emergency power off connector is seated firmly and the wire jumpers match the menu settings in <a href="#">&gt; Chapter 4.3</a> (closed or open, depending on the jumper). Then press the OFF button for 2 seconds and start the UPS system using the ON button.
The  ,  and  symbols flash and an alarm is sounded every 2 seconds.	The internal battery is not connected.	Check that the battery is properly connected (see <a href="#">&gt; Chapter 3.4</a> , <a href="#">&gt; Chapter 3.5</a> ). Then restart the UPS system using the ON button.

Operating status	Possible cause	Measure
The  ,  and  symbols flash and an alarm is sounded every second.	The output load on the UPS system is too high.	Reduce the load on the UPS output sockets.
The  symbol and error code 43 are shown on the display and a continuous alarm sounds.	UPS system shutting down because of too frequent or too extensive overload on the UPS output.	Reduce the load on the UPS output sockets. Then press the OFF button for 2 seconds. Then restart the UPS system using the ON button.
Error code 14 and continuous alarm.	Short circuit in UPS output.	Disconnect all the load from the UPS output sockets and restart the UPS system without load. If the error continues to occur, please contact <a href="#">&gt; ONLINE support</a> (see Chapter 8). If the error has been fixed, check the load.
Autonomy time is shorter than expected.	Battery is not fully charged.	Charge the battery for at least 5 hours. If the error persists, please contact <a href="#">&gt; ONLINE support</a> (see Chapter 8).
	The battery is worn through age or faulty.	Replace the battery (see <a href="#">&gt; Chapter 6.4</a> ).

## 7.4 Muting the alarm

In battery mode, hold the „ON /  /  “ button for at least 2 seconds to mute the alarm. Once the alarm is successfully muted,  appears in the display. Check the status the warning message has triggered and take appropriate measures to rectify the situation. If the status of the warning message changes, the alarm is emitted again. This has priority over the previous muting of the alarm.

### PLEASE NOTE

The alarm cannot be muted for alarm and error messages.

## 8 Support

ONLINE USV-Systeme AG (ONLINE) is one of the leading manufacturers of uninterruptible power supplies (UPS). Since 1988, the German company has focussed on the development, production, sale and support of UPS systems. Based on unit numbers sold, ONLINE products are the German number one in the UPS market and internationally recognised because of their top quality and excellent support.

As a German provider, ONLINE guarantees direct approachability, simple processing and short response times. Comprehensive support is a matter of course – before and after purchase.

### **ONLINE sets great store by reliable support and service.**

- Free direct advice and support on:  
E-Mail: [support@online-usv.de](mailto:support@online-usv.de)  
Phone: +49 (0)89 242 39 90-17
- Free 24 h advance exchange
- Interactive UPS configurator online or as app
- Optional extended warranty
- Unbureaucratic 14 day money-back guarantee
- Excellent product availability and wide network of distributors

**Further information:** > [www.online-ups.com](http://www.online-ups.com)

## 9 Technical data

### 9.1 Specification

**Table 13: Specification**

Model	ZINTO 800	ZINTO 1000	ZINTO 1500	ZINTO 2000	ZINTO 3000
Item number	Z800	Z1000	Z1500	Z2000	Z3000
Design	Rack/Tower combination				
<b>Nominal power</b>					
Apparent power	800 VA	1000 VA	1500 VA	2000 VA	3000 VA
Active power	720 W	900 W	1350 W	1800 W	2700 W
Technology	Line Interactive Technology pure sinus wave and Buck and Boost function				
<b>Input</b>					
Nominal voltage	230 V				
Voltage tolerance normal operation	176 – 274 V				
Frequency	50 / 60 Hz (auto sensing) +/-5 Hz				
Max. input current	6.0 A	7.4 A	11.0 A	14.9 A	17.6 A
Cold start	Yes				
Input connector	IEC320 C14	IEC320 C14	IEC320 C14	IEC320 C20	IEC320 C20
<b>Output</b>					
Voltage, tolerance battery operation	230 V +/-3 %				
Voltage adjustable to	208 / 220 / 230 / 240 V				
Output frequency, normal operation	identical with input				
Output frequency, battery operation	50 / 60 Hz +/-1 Hz				
Wave form	Sine				
Efficiency, normal operation	97 %				
Efficiency Buck and Boost mode	95 %				
Efficiency, battery operation	89 %	89 %	91 %	91 %	92 %
Power loss, max.	88 W	110 W	165 W	220 W	330 W
Output current, max.	4.2 A	5.3 A	7.9 A	10.6 A	15.9 A
Output sockets	8x IEC320 C13	8x IEC320 C13	8x IEC320 C13	8x IEC320 C13	8x IEC320 C13 1x IEC320 C19
<b>Battery</b>					
Type and quantity	2x 12 V / 7 Ah	2x 12 V / 12 Ah	4x 12 V / 9 Ah	4x 12 V / 9 Ah	6x 12 V / 9 Ah
Nominal voltage	24 V	24 V	48 V	48 V	72 V
Charge current	1.5 A				
Charging time to 90 % capacity	<6 hours				

Model	ZINTO 800	ZINTO 1000	ZINTO 1500	ZINTO 2000	ZINTO 3000
-------	--------------	---------------	---------------	---------------	---------------

**Typ. autonomy times at 50 and 100 % load and pf = 0.7**

Standard (UPS internal battery)	14 / 6	19 / 7	23 / 10	17 / 6	17 / 6
---------------------------------	--------	--------	---------	--------	--------

**Interfaces, Software**

USB interface			Yes		
RS-232 interface			Yes		
Surge protection for network and phone line			Yes		
SNMP slot			Yes		
Emergency-off			Yes		
Switchable output sockets			Yes		
Network management card, basic			optional (order no. DW7SNMP30)		
Network management card, professional			optional (order no. DW5SNMP30)		
AS400-/relay card			optional (order no. DWAS400DC)		

**Dimensions, Weight**

Dimensions W x H x D	438 x 88 (2U) x 412	438 x 88 (2U) x 412	438 x 88 (2U) x 512	438 x 88 (2U) x 512	438 x 88 (2U) x 632
Weight	12.9 kg	14.5 kg	21 kg	21.5 kg	29.3 kg

**Ambient conditions**

Operating temperature			0 – 40 °C		
Rel. air humidity			0 – 90 %		
Operating noise, normal operation / max.			silent / < 45 dB		
MTBF at 25 °C (except battery)			>50000 hours		

**Package contents**

UPS			1		
19" mounting bracket (left and right)			2		
Feet for tower mounting (sets)			2		
USB interface cable			1		
10 A power extension cable	2	3	3	4	4
16 A mains cable	-	-	-	1	1
Quick start guide			1		

**Certification, warranty**

Classification			VI		
Safety			EN62040-1		
EMC, Performance			EN62040-2 (EN61000-2-2, EN61000-3-2, EN61000-4-2, EN61000-4-3, EN61000-4-4, EN61000-4-5, EN61000-4-6, EN61000-4-8)		
Approval			CE		
Protection class			IP20		
Warranty			3 years incl. battery		

## 9.2 Rückansicht

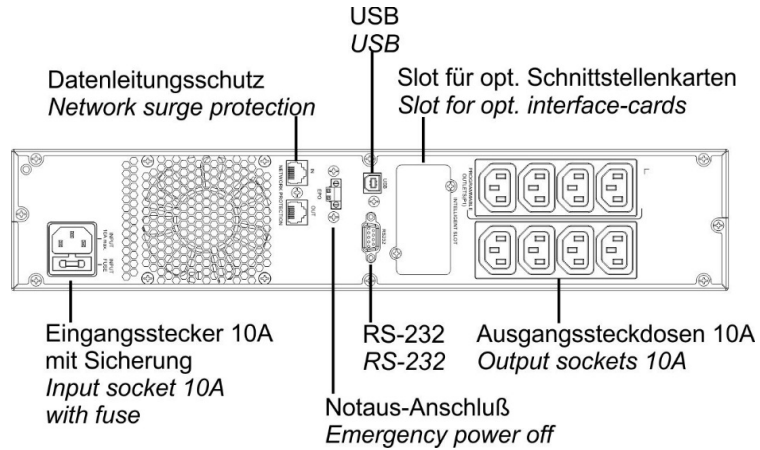


Figure 24: Rear view of ZINTO 800 - 1500

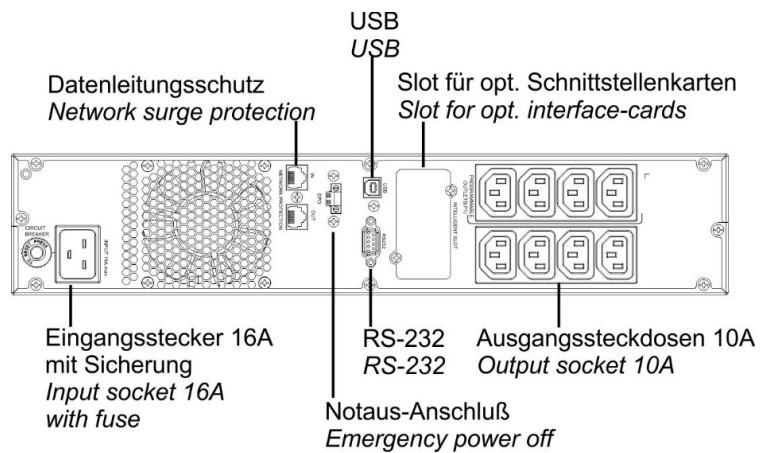


Figure 25: Rear view of ZINTO 2000

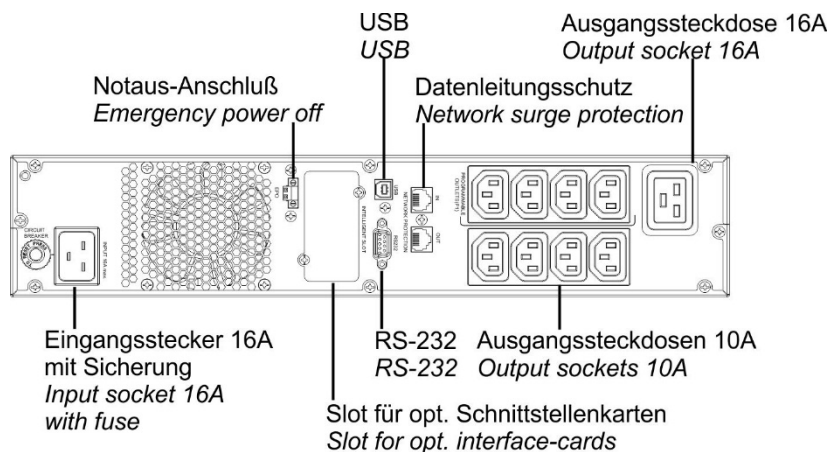


Figure 26: Rear view of ZINTO 3000

### 9.3 CE confirmation

Page 1 von 3

# CE DECLARATION OF CONFORMITY



Herewith we confirm,  
**ONLINE USV-Systeme AG,**  
 that

**Product:**  
**Uninterruptible Power Supply**

YUNTO Smile 400 (Art.-Nr. YS400)  
 YUNTO Smile 600 (Art.-Nr. YS600)  
 YUNTO Smile 800 (Art.-Nr. YS800)

YUNTO 500 (Art.-Nr. Y500)  
 YUNTO 800 (Art.-Nr. Y800)  
 YUNTO 1200 (Art.-Nr. Y1200)  
 YUNTO 1500 (Art.-Nr. Y1500)

ZINTO 800 (Art.-Nr. Z800)  
 ZINTO 1000 (Art.-Nr. Z1000)  
 ZINTO 1500 (Art.-Nr. Z1500)  
 ZINTO 2000 (Art.-Nr. Z2000)  
 ZINTO 3000 (Art.-Nr. Z3000)  
 ZINTO 800T (Art.-Nr. Z800T)

XANTO 700 (Art.-Nr. X700)  
 XANTO 1000 (Art.-Nr. X1000)  
 XANTO 1500 (Art.-Nr. X1500)  
 XANTO 2000 (Art.-Nr. X2000)

XANTO 3000 (Art.-Nr. X3000)  
 XANTO 6000 (Art.-Nr. X6000)  
 XANTO 10000 (Art.-Nr. X10000)  
 XANTO 10000 3/1 (Art.-Nr. X1000031)  
 XANTO 20000 3/1 (Art.-Nr. X2000031)

XANTO 700R (Art.-Nr. X700R)  
 XANTO 1000R (Art.-Nr. X1000R)  
 XANTO 1000R LI (Art.-Nr. X1000RLI)  
 XANTO 1500R (Art.-Nr. X1500R)  
 XANTO 2000R (Art.-Nr. X2000R)  
 XANTO 3000R (Art.-Nr. X3000R)  
 XANTO 3000R LI (Art.-Nr. X3000RLI)  
 XANTO 10000 3/3 (Art.-Nr. X1000033-0)  
 XANTO 20000 3/3 (Art.-Nr. X2000033-0)  
 XANTO 30000 3/3 (Art.-Nr. X3000033-0)  
 XANTO 40000 3/3 (Art.-Nr. X4000033-0)

**Product:**  
**Battery Pack for Uninterruptible Power Supply**

Battery Pack XANTO 1000 (Art.-Nr. X1000BP)  
 Battery Pack XANTO 2000 (Art.-Nr. X2000BP)  
 Battery Pack XANTO 3000 (Art.-Nr. X3000BP)  
 Battery Pack XANTO 1000R (Art.-Nr. X1000RBP)  
 Battery Pack XANTO 2000R (Art.-Nr. X2000RBP)  
 Battery Pack XANTO 3000R (Art.-Nr. X3000RBP)  
 Battery Pack XANTO 6000 (Art.-Nr. X6000BP)  
 Battery Pack XANTO 10000 (Art.-Nr. X10000BP)  
 Battery Pack XANTO 10000 3/1 (Art.-Nr. X1000031BP)  
 Battery Pack XANTO 10000 3/3 (Art.-Nr. X1000033BP-0)  
 Battery Pack XANTO 20000 3/3 (Art.-Nr. X2000033BP-0)  
 Battery Pack XANTO 40000 3/3 (Art.-Nr. X4000033BP-0)

**corresponds to the provisions of following directives:**

- 2014 / 35 / EU (Low voltage directive)
- 2014 / 30 / EU (EMC directive)
- 2011 / 65 / EU (RoHS directives)
- 2015 / 863 / EU (RoHS directives)
- 2023/1542/EU (Battery directive)

**For the evaluation of the compliance with these directives,  
the following standards and specifications were applied:**

**Uninterruptible Power Supply YUNTO Smile, Uninterruptible Power Supply YUNTO**

Low voltage directive:

EN IEC 62040-1: 2019

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013 just YUNTO 500, YUNTO 800

EMC directive:

EN IEC 62040-2: 2018, EN 61000-4-2: 2009, EN IEC 61000-4-3: 2020, EN 61000-4-4: 2012, EN 61000-4-5: 2014,  
EN 61000-2-2: 2002 + A1: 2017 + A2: 2019, EN 62321: 2009

RoHS directive:

EN IEC 63000: 2018

**Uninterruptible Power Supply ZINTO, ZINTO Tower**

Low voltage directive:

EN IEC 62040-1: 2019

EMC directive:

EN IEC 62040-2: 2018, EN IEC 61000-3-2: 2019 + A1: 2021, EN 61000-4-2: 2009, EN IEC 61000-4-3: 2020,  
EN 61000-4-4: 2012, EN 61000-4-5: 2014 + A1: 2017, EN 61000-4-6: 2014, EN 61000-4-8: 2010,  
EN 61000-2-2: 2002, EN 62321: 2009

RoHS directive:

EN IEC 63000: 2018

**Uninterruptible Power Supply XANTO, XANTO LI, XANTO 3/3**

Low voltage directive:

EN IEC 62040-1: 2019, EN62040-1: 2008 + A1: 2013

EMC directive:

EN IEC 62040-2: 2018, EN IEC 61000-3-2: 2019 + A1: 2021, EN 61000-4-2: 2009, EN IEC 61000-4-3: 2020,  
EN 61000-4-4: 2012, EN 61000-4-5: 2016, EN 61000-4-6: 2014, EN 61000-4-8: 2010, EN 61000-2-2: 2012,  
EN 62321: 2009, EN62040-2: 2006 + AC: 2006, EN61000-3-2: 2014 (EN61000-4-4: 2009, EN61000-4-3: 2006,  
+ A2: 2010, EN61000-4-4: 2012, EN61000-4-5: 2006, EN61000-4-6: 2014, EN61000-4-8: 2010, EN61000-2-2: 2002)

RoHS directive:

EN IEC 63000: 2018



---

**Battery Pack for Uninterruptible Power Supply XANTO**

Low voltage directive:  
EN IEC 62040-1: 2019

EMC directive:  
EN IEC 62040-2: 2018, EN IEC 61000-3-2: 2019 + A1: 2021, EN 61000-4-4: 2012, EN IEC 61000-4-3: 2020,  
EN 61000-4-5: 2014 + A1: 2017, EN 61000-4-6: 2014, EN 61000-4-8: 2010, EN 61000-2-2: 2002 + A1: 2017  
+ A2: 2019, EN 62321: 2009, EN IEC 62040-2: 2016, EN IEC 61000-3-2: 2019 + A1: 2021, EN 61000-3-3: 2013  
+ A2: 2021, EN IEC 62040-1: 2019

RoHS directive:  
EN IEC 63000:2018

## 10 Warranty

ONLINE USV-Systeme AG (ONLINE) guarantees that this product will be free of material and production faults for a period of three years from the purchase date. ONLINE's obligation in accordance with this guarantee is restricted to the repair or replacement (at ONLINE's discretion) of any faulty products. Before warranty claims can be asserted, a Returned Material Authorization (RMA) number must be obtained from customer services. Products must be returned with the postage paid by the sender, a brief description of the problem and evidence of the place and date of purchase. This warranty does not apply to devices damaged by accidents, negligence or misuse or those which have otherwise been altered or modified.

Apart from the above exceptions, ONLINE accepts no explicit or tacit warranty, including a guarantee of conventional quality or suitability for a specific purpose. In some jurisdictions, the restriction or exclusion of tacit guarantees is prohibited, which means that the restrictions or exclusions above may not apply to the purchaser.

Irrespective of the above exclusions, ONLINE shall under no circumstances be liable for direct, indirect, specific, auxiliary or subsequent damage caused as a result of the use of this product, even if ONLINE was informed about the possibility of such damage. In particular, ONLINE shall not be liable for costs of whatsoever nature, such as lost profit or revenue, loss of equipment, loss of the use of device, loss of software or data, replacement costs, third-party claims or other costs.

## Imprint

### **ONLINE USV-Systeme AG**

Luise-Ullrich-Straße 8  
82031 Grünwald / Germany

Phone +49 (0)89-242 39 90-10  
E-Mail [info@online-usv.de](mailto:info@online-usv.de)

> [www.online-usv.de](http://www.online-usv.de)

### **ONLINE USV-Systeme AG c/o swizzconnexx**

Pilatusstrasse 17  
5630 Muri / Switzerland

Phone +41 (0)41-500 28 68  
E-Mail [info@online-usv.ch](mailto:info@online-usv.ch)

> [www.online-usv.ch](http://www.online-usv.ch)

### **ONLINE UPS-Systems S.r.l.**

Via Ferruccio Gilera 110  
20862 Arcore (MB) / Italia

Phone +39 (0)39-205 14 44  
E-Mail [commerciale@online-ups.it](mailto:commerciale@online-ups.it)

> [www.online-ups.it](http://www.online-ups.it)

The content is copyright © 2025 by ONLINE USV-Systeme AG.  
All rights reserved. Unauthorised reproduction in part or in whole is not permitted without consent.

